

*Continuous Forms Processing
& Mailing Equipment*



SPEDO 2600 MK2 PINLESS FORMS CUTTER SPARE PARTS LIST


[JUNE 2024]

**SPEDO UK LTD, 76 WOOLMER WAY, BORDON, HAMPSHIRE GU35 9QF, UK
TEL: +44 (0) 1420 487442 • FAX: +44 (0) 1420 477827
E-MAIL: spedo@spedouk.com • WEBSITE: www.spedouk.com**

INDEX

ELECTRICAL PARTS	PAGES 3 – 5
OPERATOR PANEL.....	4
CABLES.....	5
MECHANICAL PARTS	PAGES 6 – 41
DRIVER COMPARTMENT.....	6
DOOR LOCK UNIT.....	7
SAFETY COVER ASSEMBLY.....	9
EDGE TRIMMER ASSEMBLY.....	10 - 12
CENTRE CUTTER ASSEMBLY.....	13 - 16
PAPER TRANSPORT ASSEMBLY.....	17 - 21
INFEED BRUSH ASSEMBLY.....	22
UPPER LINEAR GUIDE ASSEMBLY & LOWER PAPER GUIDE.....	23
INDEX WHEEL ASSEMBLY.....	23
FEED MOTOR MOUNT ASSEMBLY.....	23
INFEED GUIDE ASSEMBLY.....	24
PRESSURE HEAD ASSEMBLY.....	25 - 26
ANTI-LIFT BAR ASSEMBLY.....	27
SENSOR MOUNT ASSEMBLY.....	28
MARGIN TRIM BURSTER [OPTIONAL].....	29 - 30
GUTTER CUT KIT [OPTIONAL].....	31 - 34
BEARING PLATE COMPARTMENT.....	35
GANTRY ASSEMBLY.....	36
BLADE ASSEMBLY.....	37 - 39
STACK TRAY.....	39
KICKOUT ROLLER.....	40 - 41
AIR BLAST PUMP.....	41

ELECTRICAL PARTS

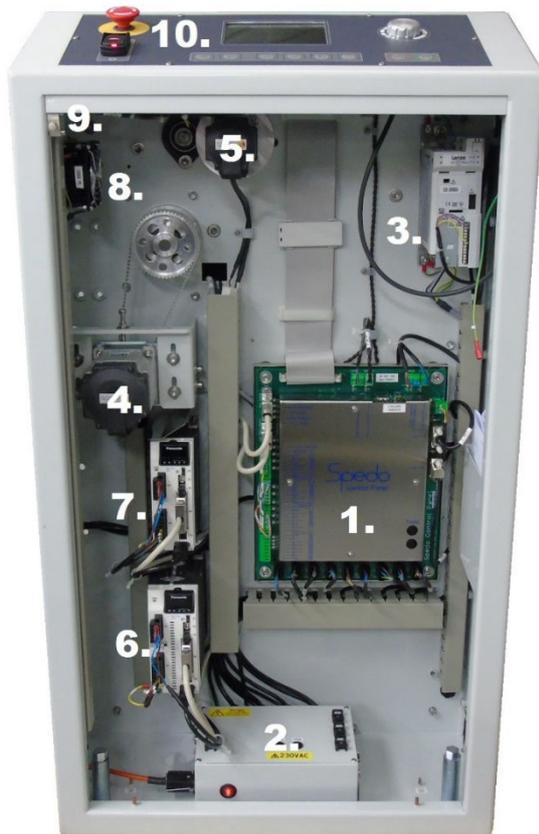

SP 006 849
SENSOR, PRINT MARK



SP 007 636
E/T MOTOR



SP 000 284
RUN-OUT SWITCH



SP 007 860
PULSED DC BAR, 600MM
LONG



1. SP 007 640
2600 MK2 CONTROL
PANEL COMPLETE



2. SP 007 270
POWER
DISTRIBUTION UNIT

SP 007 270 – POWER DISTRIBUTION UNIT SPARE PARTS



SP 007 268
PCB POWER DISTRIBUTION
MK2



SP 007 730
CONTACTOR, 24V DC



SP 007 734
PCB, I/O INTERFACE



SP 007 737
SWITCH, ILLUMINATED,
ON/OFF



3. SP 007 623
INVERTER ASSEMBLY
COMPLETE



4. SP 007 617
MOTOR, BLADE FIRE
SERVO



5. SP 007 634
PINFEED SERVO
MOTOR



6. SP 007 622
DRIVER, BLADE FIRE
SERVO



7. SP 007 624
DRIVER, PAPER FEED




8. SP 007 635
FAN ASSEMBLY



9. SP 004 460
SWITCH, SAFETY
COVER


10. SP 007 639 - 2600 MK2 OPERATOR PANEL COMPLETE

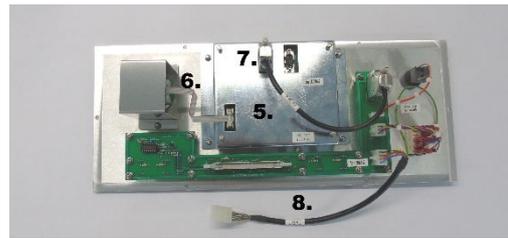

1. SP 007 607
EMERGENCY STOP
SWITCH



2. SP 007 606
SWITCH,
ILLUMINATED ROCKER

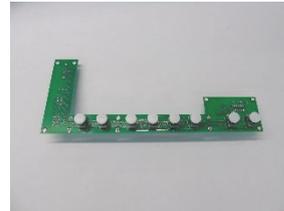


3. SP 007 482
PCB, OPERATOR
SWITCH COMPLETE



4. SP 006 334
DIGITAL SPEED POT
ASSEMBLY



SP 006 337
E-WHEEL [SPARE PART
FOR SP 006 334]

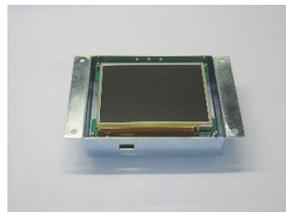

5. SP 007 777
OPERATOR LCD
ASSEMBLY



6. SP 006 417
SPEED CONTROL
CABLE



7. SP 006 413
LCD COMMS CABLE



8. SP 007 723
OPERATOR ON/OFF
CABLE



SP 007 464
CAP, ROUND, OPAQUE



SP 007 477
PCB, SWITCH NON-
ILLUMINATED




SP 007 478
PCB, SWITCH WHITE LED



SP 007 479
PCB, SWITCH RED LED



SP 007 480
PCB, SWITCH GREEN LED

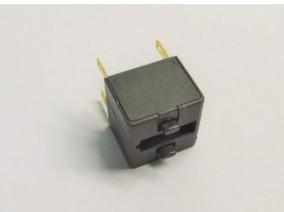

SP 007 608
CONTACT BLOCK EMERGENCY
STOP



SP 007 609
BEZEL, FLUSH MOUNTING
STOP

2600 CABLES



SP 007 723
OPERATOR PANEL ON/OFF
CABLE



SP 004 547
KNIFE SENSOR CABLE C/W
SENSOR



SP 006 026
MAINS SAFETY COVER
CABLE



SP 007 638
INVERTER POWER CABLE



SP 006 470
CABLE, RUNOUT SWITCH



SP006 086
SERVO POWER CABLE



SP 006 085
BLADE SERVO POWER
CABLE



SP 007 682
BLADE ENCODER CABLE



SP 006 020
CABLE, MOTOR



SP 006 021
CABLE, BRAKE



SP 006 018
CABLE, I/O



SP 006 024
CABLE, BLADE MOTOR




SP 007 626
BLADE I/O CABLE



SP 007 681
PAPER FEED ENCODER
CABLE



SP 006 471
SAFETY COVER CABLE

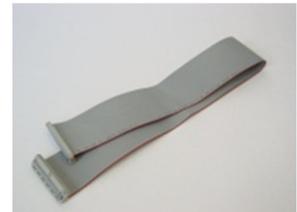

SP 004 546
OPERATOR PANEL RIBBON
CABLE, 50 WAY



SP 007 641
CABLE, PRINT MARK,
SENSOR




SP 007 642
CABLE, PRINT MARK, INPUT



SP 007 899
CABLE, POWER, ANTI-
STATIC BAR

MECHANICAL PARTS

DRIVER COMPARTMENT

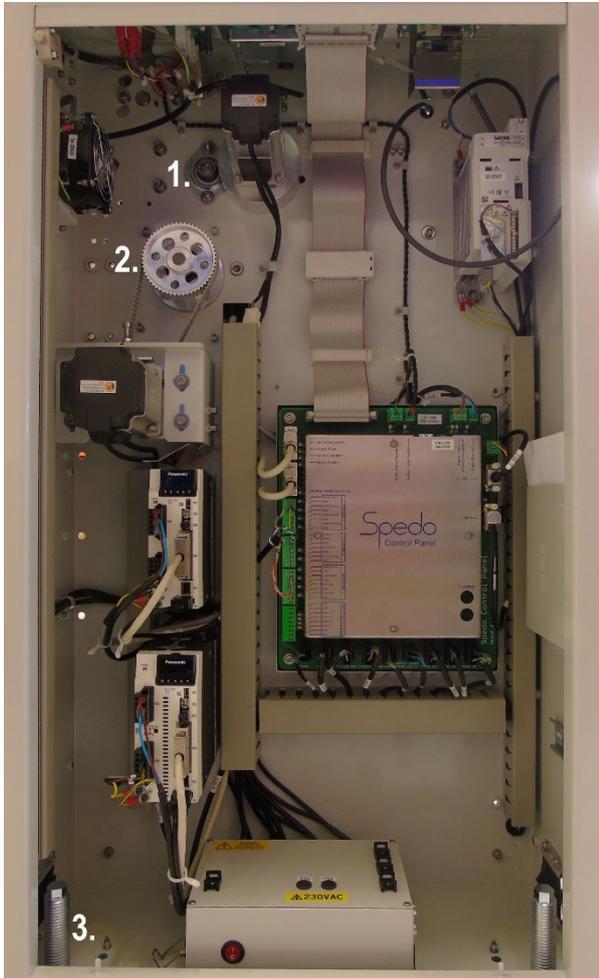

1. SP 002 133
BEARING, E/T SHAFT



2. SP 006 879
SHORT STROKE BLADE
DRIVE ASSEMBLY

* BLADE DRIVE ASSEMBLY SPARES LISTED BELOW *



3. SP 004 645
HEIGHT ADJUSTING
FOOT ASSEMBLY



SP 006 840
CASTOR, TWIN WHEEL,
UNBRAKED


BLADE DRIVE ASSEMBLY SPARE PARTS



SP 006 876
PULLEY, 55T, BLADE
TIMING



SP 004 538
PULLEY, 20T, BLADE DRIVE
TIMING

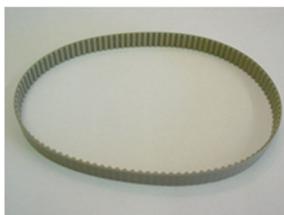

SP 004 805
BELT, BLADE DRIVE



SP 006 877
CRANK, SHORT STROKE
BLADE DRIVE



SP 004 832
SPACER, BLADE CRANK



SP 004 812
CIRCLIP, EXTERNAL, 20MM



SP 003 389
CIRCLIP, INTERNAL, 42MM



SP 004 762
BEARING



SP 006 937
PLATE, MOTOR MOUNTING

DOOR LOCK UNIT



SP 007 484
DOOR LOCK SQUARE



SP 007 485
KEY, SQUARE LOCK



SP 005 122
DOOR LOCK, SLOTTED



SP 007 855
KEY, SQUARE LARGE



SP 005 190
BOSS, PAPER FEED MOTOR
MOUNTING



SP 007 797
DIN RAIL, 97 X 35MM



SP 006 485
HOLE SEAL BRUSH



SP 007 522
DOCUMENT HOLDER



SP 007 094
SERVO DRIVER ADAPTOR
PLATE



SP 007 093
ANTI-STATIC BLANKING
PLATE



SP 004 563
BUFFER, ANTI-VIBRATION
LOGIC UNIT MOUNT




SP 005 941
GROMMET, 20MM



SP 005 351
DEBRIS DEFLECTOR PLATE


PAPER TRANSPORT COMPARTMENT

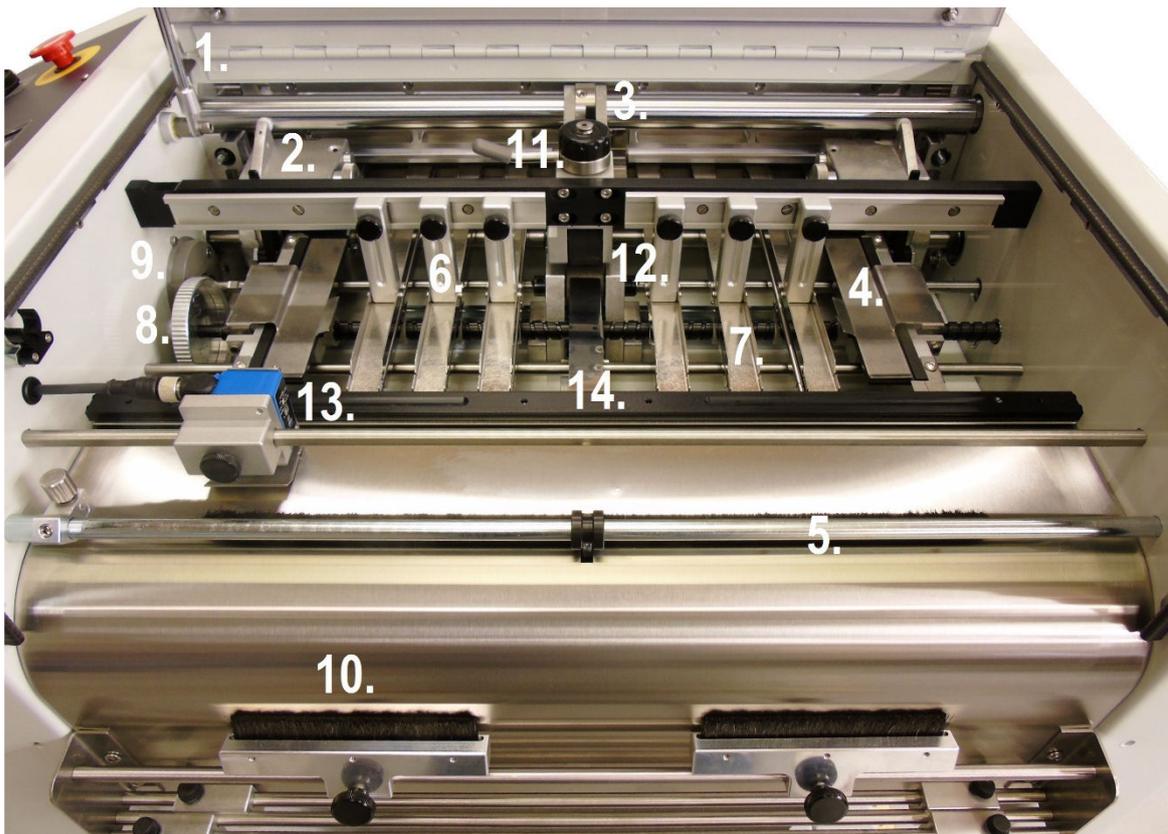

- | | |
|----------|------------------------------|
| 1. | SAFETY COVER ASSEMBLY |
| 2. | EDGE TRIMMER ASSEMBLY |
| 3. | CENTRE CUTTER ASSEMBLY |
| 4. | PAPER TRANSPORT ASSEMBLY |
| 5. | INFEEED BRUSH ASSEMBLY |
| 6. | UPPER LINEAR GUIDE ASSEMBLY |
| 7. | PAPER GUIDE, LOWER |
| 8. | INDEX WHEEL ASSEMBLY |
| 9. | FEED MOTOR MOUNT ASSEMBLY |
| 10. | INFEEED GUIDE ASSEMBLY |
| 11. | PRESSURE HEAD ASSEMBLY |
| 12. | DRIVE ROLLER ASSEMBLY |
| 13. | SENSOR MOUNT ASSEMBLY |
| 14. | ANTI-LIFT BAR ASSEMBLY |
| OPTIONAL | MARGIN TRIM BURSTER ASSEMBLY |
| OPTIONAL | GUTTER CUT KIT |

SAFETY COVER ASSEMBLY SPARE PARTS

SP 000 177 SAFETY COVER

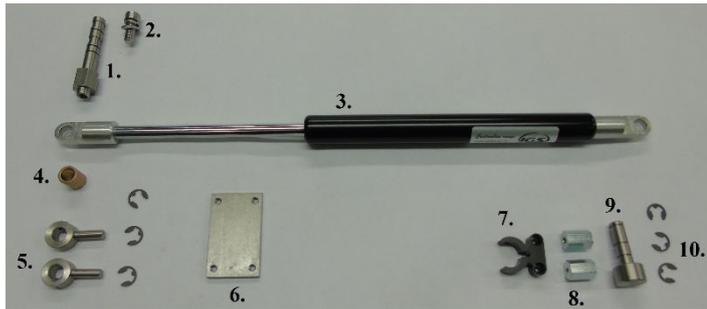

1. SP 000 385
SPINDLE, SAFETY COVER



2. SP 000 559
SCREW, M6 X
12MM, SOCKET CAP



3. SP 000 117
GAS DAMPER



4. SP 000 682
BUSH, OILITE




5. SP 005 118
ARMATURE, SAFETY
COVER SWITCH



6. SP 001 811
PLATE, SAFETY
COVER SWITCH



7. SP 002 211
CLIP, SAFETY
COVER GAS DAMPER

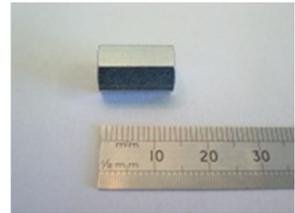


8. SP 001 210
PILLAR, SAFETY
COVER CLIP



9. SP 000 380
BOLT, SAFETY COVER



10. SP 000 958
CIRCLIP, 6MM, E-
TYPE

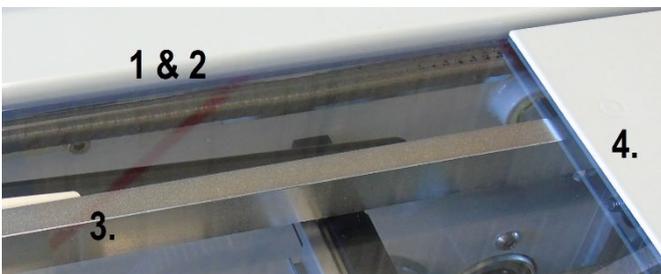

1. SP 000 519
BUFFER, STRIP
RUBBER 1 MTR



2. SP 000 760
ANGLE, SAFETY
COVER SUPPORT, RH



2. SP 000 761
ANGLE, SAFETY
COVER SUPPORT, LH



3. SP 002 040
BAR, GAS DAMPER
MOUNT



4. SP 004 710
HINGE, SAFETY
COVER

EDGE TRIMMER ASSEMBLY SPARE PARTS



SP 006 911
EDGE TRIMMER ASSEMBLY,
LH



SP 006 910
EDGE TRIMMER ASSEMBLY,
RH



SP 006 909
E/T HOUSING, LH



SP 006 908
E/T HOUSING, RH



SP 006 668
MTB GUIDE, LH



SP 006 669
MTB GUIDE, RH





SP 006 905
DEFLECTOR PAPER GUIDE,
LH



SP 006 904
DEFLECTOR PAPER GUIDE,
RH



SP 005 241
SHAFT, E/T DRIVE, 730MM

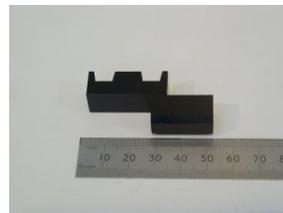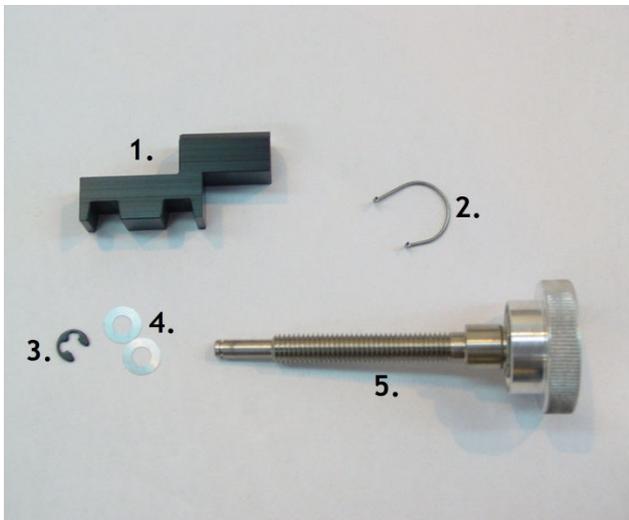


1. SP 006 903
DETENT, DOUBLE



2. SP 001 104
SPRING, E/T SIDE
ADJUSTING SPINDLE



3. SP 001 924
CIRCLIP, 4MM, E-TYPE

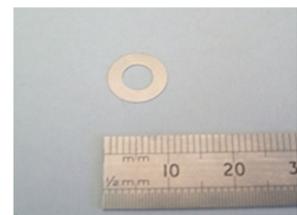


4. SP 003 426
SHIM, E/T SIDE
ADJUSTER, 5.15 x 10 x
0.1MM




5. SP 000 382
SPINDLE, E/T
HOUSING

EDGE TRIMMER ASSEMBLY SPARE PARTS

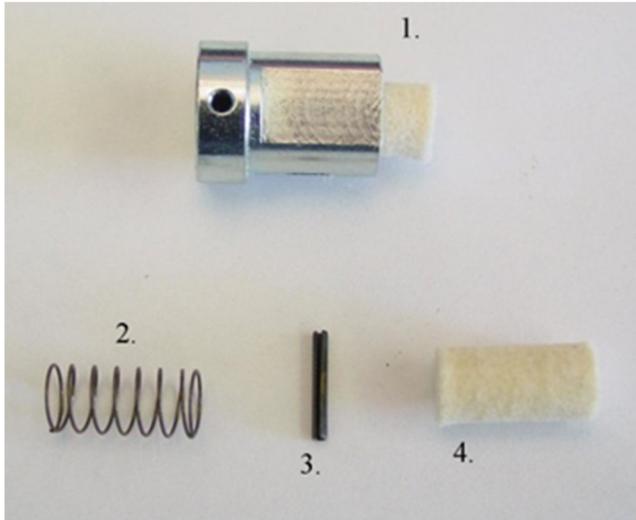

1. SP 000 164
E/T LUBRICATION
COMPLETE

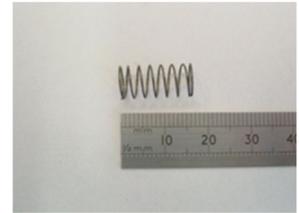


2. SP 004 722
SPRING



3. SP 001 478
ROLL PIN, M1.5 X
12MM



4. SP 003 118
WICK, E/T
LUBRICATION

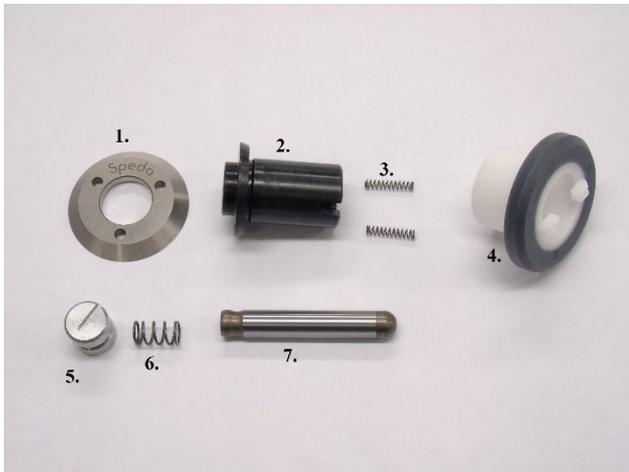

1. SP 000 063
BLADE, 45°



2. SP 004 853
E/T TOP HUB COMPLETE



3. SP 000 381
SPRING, E/T TOP HUB



4. SP 005 187
FRICTION HUB MK2



5. SP 003 021
BUSH, E/T TOP HUB
ECCENTRIC




6. SP 001 828
SPRING, E/T TOP HUB
ECCENTRIC



7. SP 003 421
SHAFT, E/T TOP HUB

EDGE TRIMMER ASSEMBLY SPARE PARTS

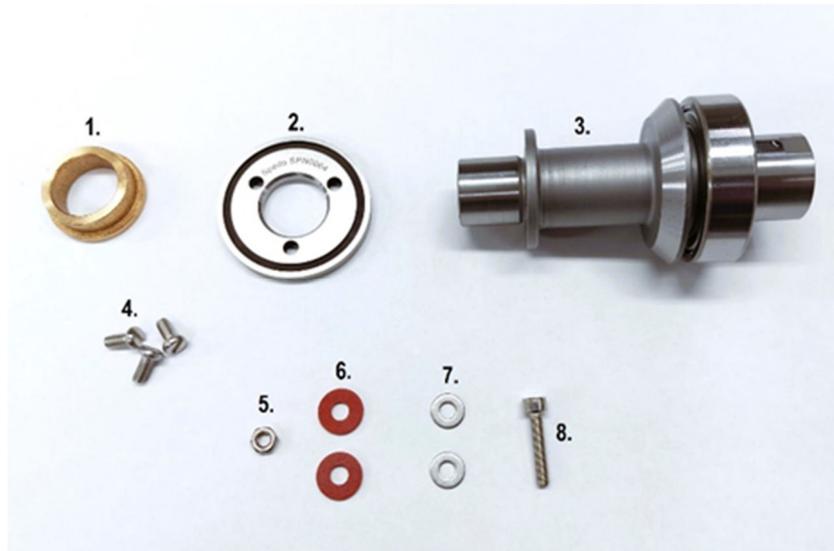

1. SP 000 248
BUSH, OILITE FLANGED



2. SP 000 064
BLADE, 90°



3. SP 004 747
E/T LOWER HUB
COMPLETE



4. SP 001 040
SCREW, M4 x 8MM



5. SP 000 953
NUT, M4




6. SP 000 796
WASHER, FIBRE, E/T
LOWER HUB



7. SP 007 033
WASHER, M4



8. SP 000 517
SCREW, M4 x 20MM

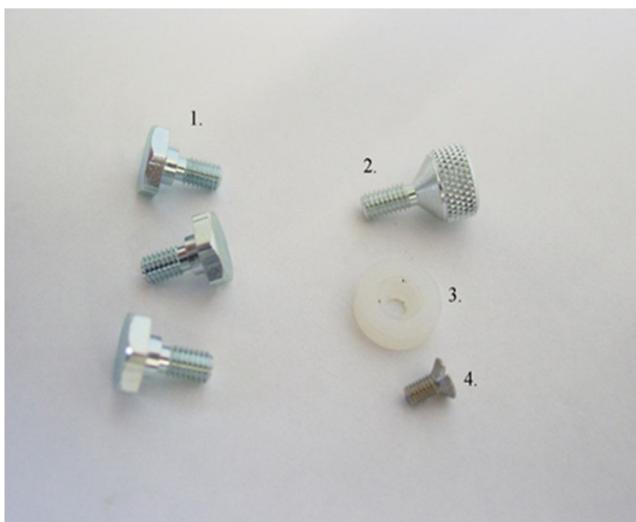

1. SP 001 158
SCREW, M4 x 8.7MM,
HEX



2. SP 000 359
WASHER, NYLON
HEX




3. SP 004 816
SCREW, M3 x 6MM,
COUNTERSUNK



4. SP 000 356
SCREW, KNURLED,
E/T HOUSING

CENTRE CUTTER ASSEMBLY SPARE PARTS

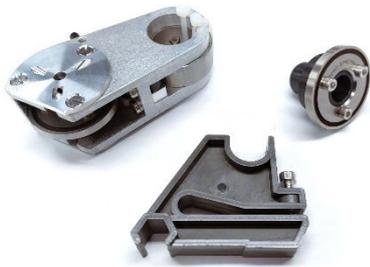


SP 003 108
CENTRE CUTTER ASSEMBLY



SP 003 086
CENTRE CUTTER BEARING ARM



SP 002 043
LOWER CENTRE CUTTER HUB C/W
BEARING

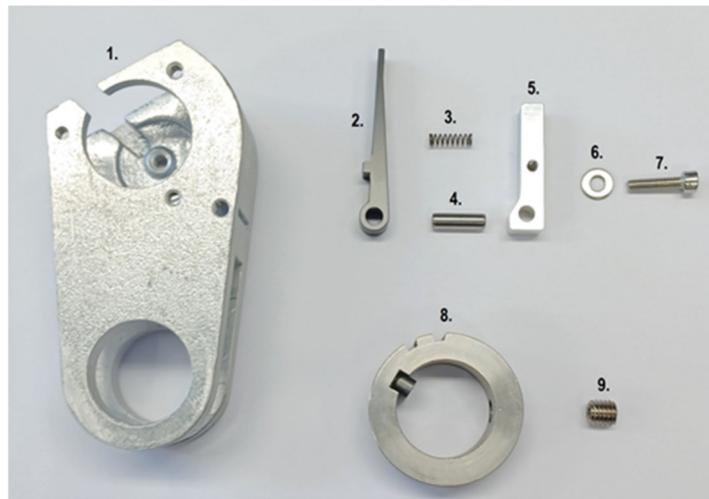

1. SP 006 038
CASTING, CENTRE
CUTTER ARM



2. SP 003 041
CENTRE CUTTER ARM
LOCKING LEVER



3. SP 000 240
SPRING, LOCKING
LEVER



4. SP 004 847
PIN, CENTRE CUTTER
LOCKING LEVER



5. SP 003 031
LOCKING LEVER
MOUNTING BLOCK



6. SP 007 033
WASHER, M4, FORM C



7. SP 000 851
SCREW, M4 X 16MM



8. SP 001 866
RING, CENTRE
CUTTER ARM



9. SP 000 892
SCREW, M8 X 8MM,
GRUB

CENTRE CUTTER ASSEMBLY SPARE PARTS



1. SP 000 064
BLADE, 90°



2. SP 003 229
HUB, UPPER CENTRE
CUTTER



3. SP 003 002
PLATE, UPPER BLADE
MOUNT



4. SP 002 022
CIRCLIP, 4MM, E-TYPE



5. SP 003 075
AXLE, CENTRE CUTTER
TOP HUB



6. SP 003 062
PLATE, SPRING
CENTRE CUTTER
UPPER HUB



7. SP 002 228
SPRING, CENTRE
CUTTER HUB



8. SP 004 615
BEARING, CENTRE
CUTTER TOP HUB



9. SP 004 838
CIRCLIP, 16MM,
INTERNAL



10. SP 000 854
SCREW, DOG POINT
GRUB M4 X 6MM



11. SP 000 412
SCREW, M4 X 8MM,
COUNTERSUNK

CENTRE CUTTER ASSEMBLY SPARE PARTS




1. SP 000 064
BLADE, 90°



2. SP 001 913
HUB, LOWER CENTRE
CUTTER



3. SP 004 631
SCREW, SPECIAL DOG
POINT GRUB M8 X
12MM

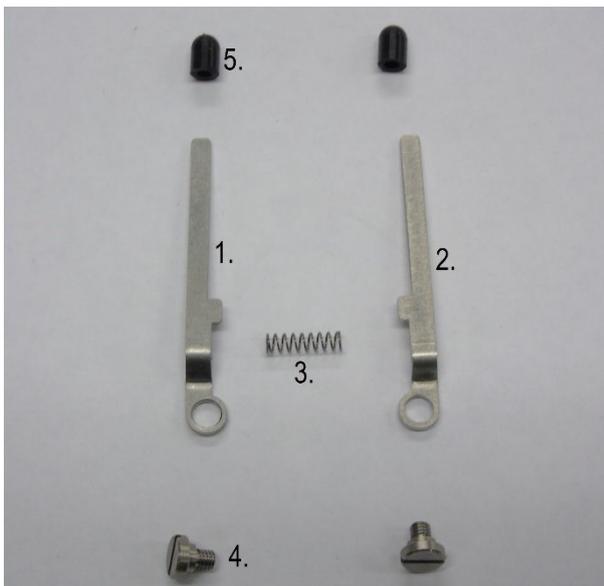

1. SP 004 845
LEVER, SIDE RELEASE,
LH



2. SP 004 475
LEVER, SIDE RELEASE,
RH



3. SP 000 330
SPRING, SIDE RELEASE
LEVER




4. SP 004 712
SCREW, SHOULDERED



5. SP 006 922
SILICONE CAP

CENTRE CUTTER ASSEMBLY SPARE PARTS

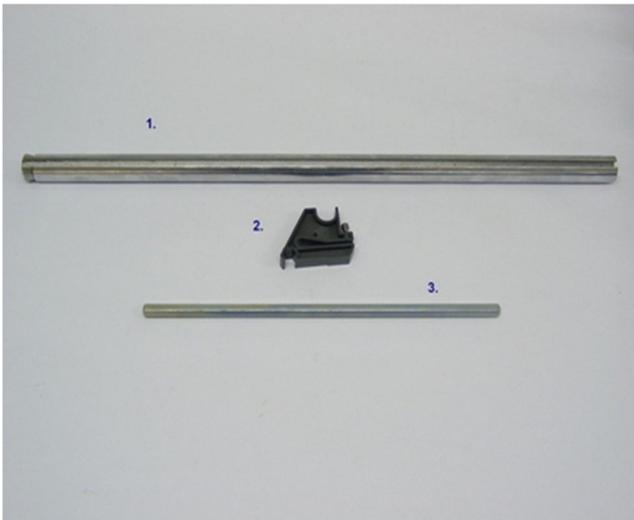

1. SP 001 851
BAR, CENTRE CUTTER
ARM MOUNT




2. SP 000 389
BRIDGE, CENTRE
CUTTER



3. SP 000 700
BAR, CENTRE CUTTER
BRIDGE SUPPORT

PAPER TRANSPORT ASSEMBLY SPARE PARTS

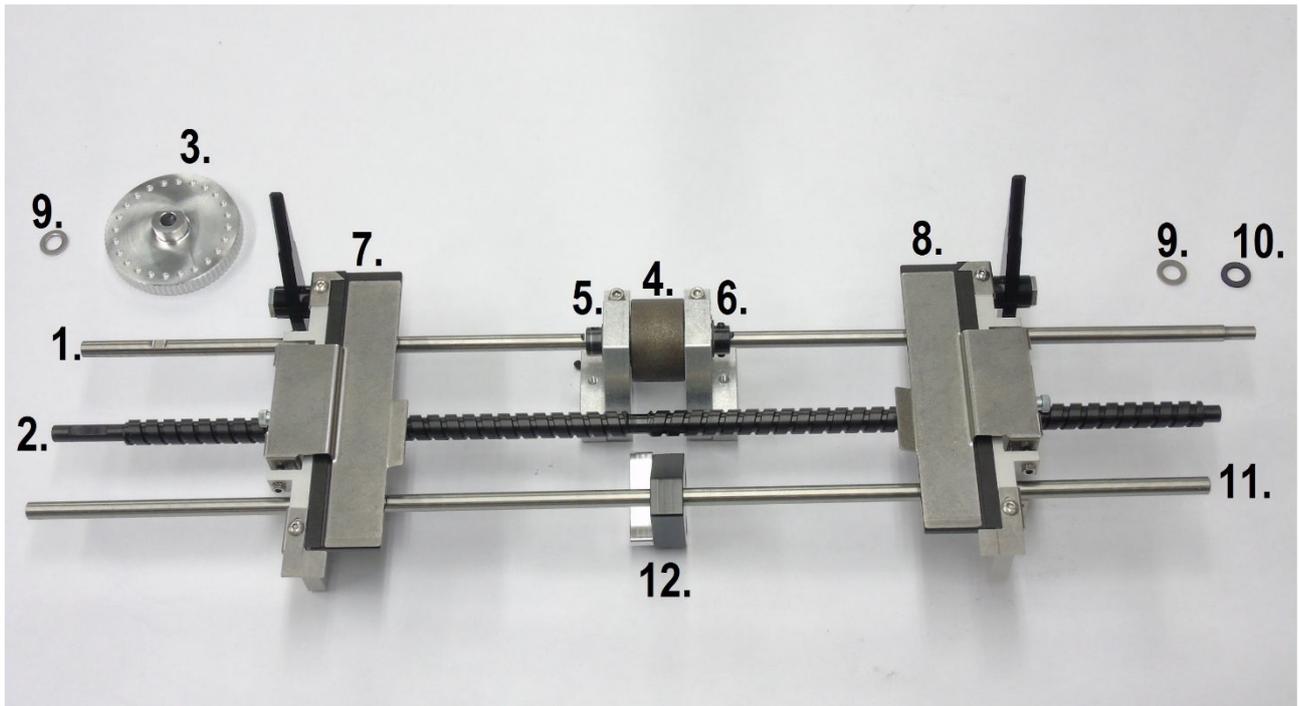

1. SP 006 941
SHAFT, DRIVE ROLLER



2. SP 004 657
SHAFT, SCROLL



3. SP 006 942
HANDWHEEL, SIDE
ADJUST



4. SP 006 869
DRIVE ROLLER
ASSEMBLY



5. SP 006 871
DRIVE ROLLER MOUNT
ASSEMBLY, LH



6. SP 006 870
DRIVE ROLLER
MOUNT ASSEMBLY
RH



7. SP 007 259
FORM GUIDE
ASSEMBLY, LH



8. SP 007 258
FORM GUIDE
ASSEMBLY, RH

* DRIVE ROLLER MOUNT ASSEMBLY SPARES SEE PAGE 18 *

* FORM GUIDE ASSEMBLY SPARES SEE PAGES 19 - 21 *



9. SP 004 658
SHIM, M11 x 18 x 1MM



10. SP 007 263
SCROLL SHAFT
THRUST WASHER




11. SP 008 115
FORM GUIDE CROSS
BAR



12. SP 007 375
FORM GUIDE SUPPORT
BAR STEADY
ASSEMBLY


DRIVE ROLLER MOUNT ASSEMBLY SPARE PARTS

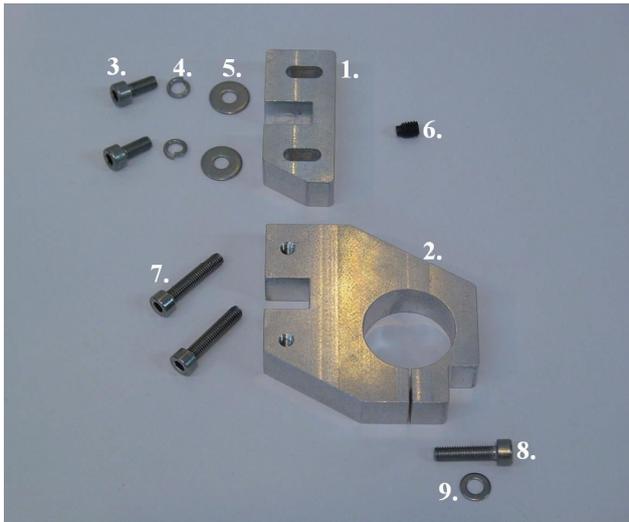

1. SP 006 868
MOUNT, BEARING
CLAMP, LH



SP 006 866
MOUNT, BEARING
CLAMP, RH

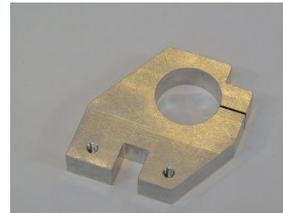


2. SP 000 867
CLAMP, BEARING



3. SP 000 454
SCREW, M5 x 12
SOCKET HEAD



4. SP 005 080
WASHER, M5, SPRING

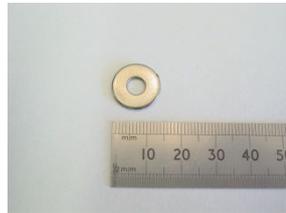

5. SP 005 081
WASHER, M5 x 15MM



6. SP 000 889
SCREW, M6 x 8MM,
DOG POINT GRUB




7. SP 000 864
SCREW, M5 x 25MM,
SOCKET HEAD



8. SP 000 447
SCREW, M5 x 20MM
SOCKET CAP



9. SP 000 575
WASHER, M5

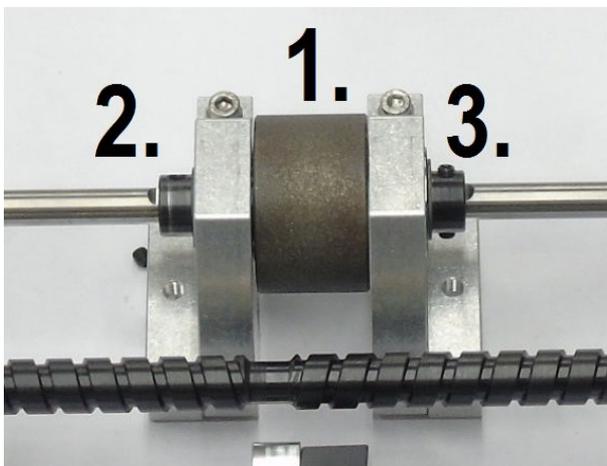

1. SP 006 869
DRIVE ROLLER
ASSEMBLY




2. SP 006 871
DRIVE ROLLER
MOUNT ASSY, LH



3. SP 006 870
DRIVE ROLLER
MOUNT ASSY, RH

FORM GUIDE ASSEMBLY SPARE PARTS

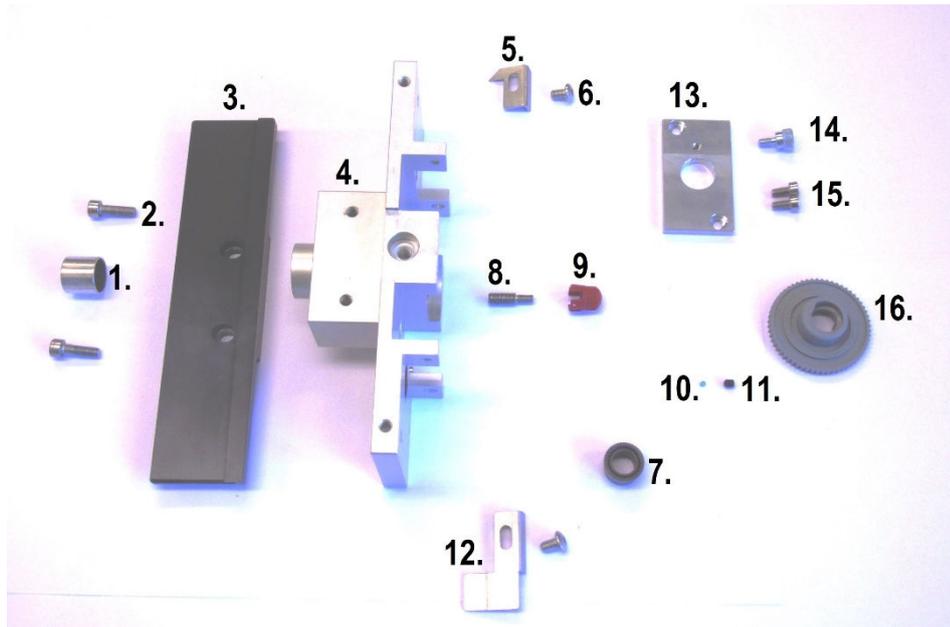

1. SP 005 825
BUSH



2. SP 001 009
SCREW, M5 x 16MM
SOCKET CAP



3. SP 006 931
FORM GUIDE PLATE,
LH



3. SP 006 930
FORM GUIDE PLATE,
RH



4. SP 007 257
FORM GUIDE MOUNT,
LH



4. SP 007 256
FORM GUIDE MOUNT,
RH



5. SP 007 078
FORM INFEEED
MARKER, LH



5. SP 007 076
FORM INFEEED
MARKER, RH



6. SP 001 665
SCREW, M5 x 8MM,
BUTTON SOCKET



7. SP 006 858
BUSH, 10MM SELF
ALIGNING



8. SP 003 057
PIN, THREADED FEED
UNIT FLAP HEIGHT
ADJUSTING



9. SP 005 052
NUT, FEED UNIT
FLAP HEIGHT
ADJUSTING




10. SP 006 886
NYLON PLUG



11. SP 000 047
SCREW, M4 x 4MM,
DOG POINT GRUB

FORM GUIDE ASSEMBLY SPARE PARTS

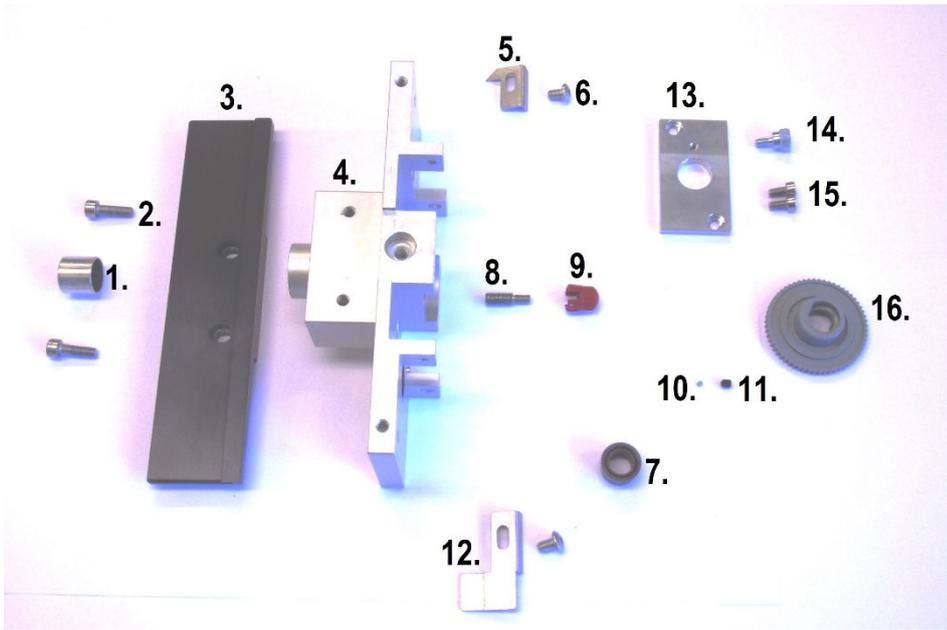

12. SP 007 082
FORM INFEEED
DEFLECTOR, LH



SP 007 080
FORM INFEEED
DEFLECTOR, RH



13. SP 000 165
PLATE, FEED UNIT
LOCKING



14. SP 001 965
SCREW, KNURLED,
FEED UNIT




15. SP 000 782
SCREW, M4 X 8MM,
SOCKET CAP



16. SP 005 054
NUT, SPINDLE, LH



SP 005 055
NUT, SPINDLE, RH

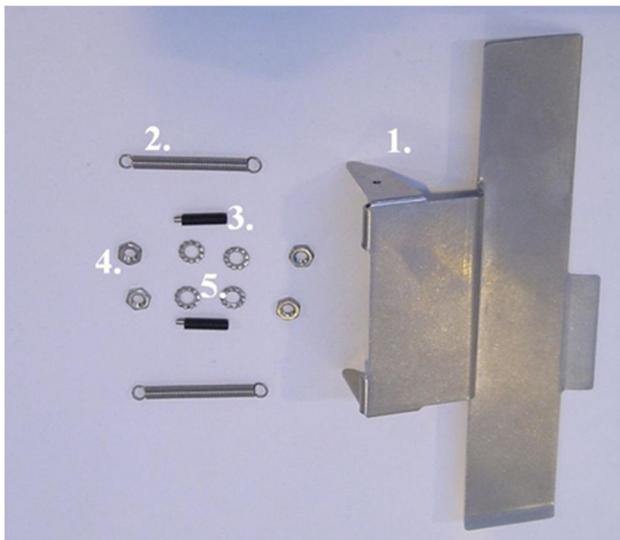

1. SP 006 934
FLAP, FORM GUIDE
UNIT, LH



SP 006 933
FLAP, FORM GUIDE
UNIT, RH




2. SP 000 170
SPRING, FEED UNIT
FLAP




3. SP 000 277
PIN, THREADED, FEED
UNIT FLAP


FORM GUIDE ASSEMBLY SPARE PARTS

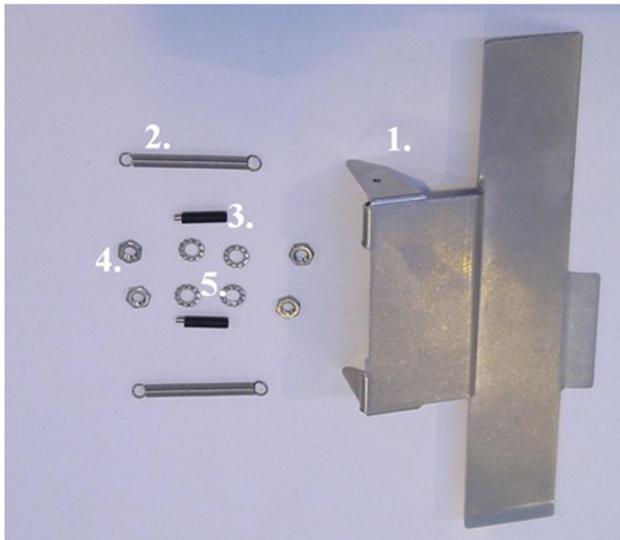

4. SP 000 643
NUT, M4, HALF

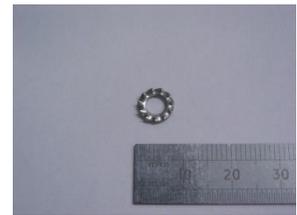

5. SP 000 784
WASHER, M4, STAR

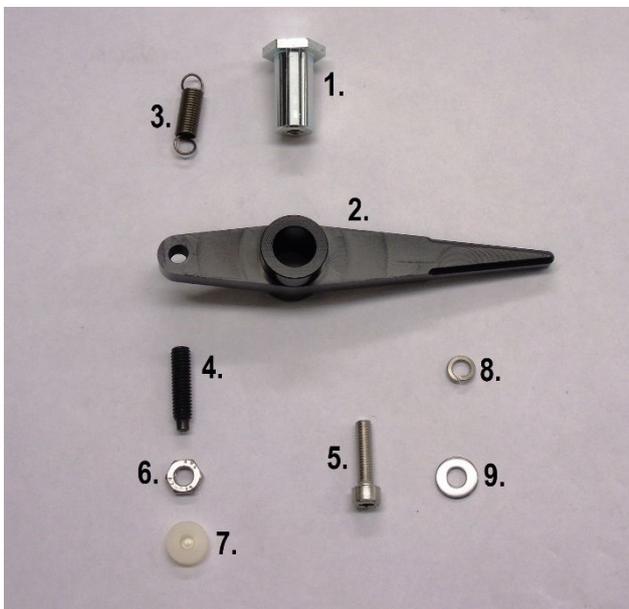

1. SP 003 024
BUSH, LOCKING LEVER



2. SP 004 684
FEED UNIT LOCKING
LEVER



3. SP 000 268
SPRING, LOCKING
LEVER



4. SP 000 742
SCREW, DOG POINT
GRUB, M6 X 25MM



5. SP 000 447
SCREW, M5 X 20MM,
SOCKET HEAD



6. SP 000 555
NUT, HALF, M6



7. SP 000 994
SPACER, LOCKING
LEVER SUPPORT



8. SP 005 080
WASHER, M5, SPRING



9. SP 000 711
WASHER, M5 X 12MM

INFEEED BRUSH ASSEMBLY SPARE PARTS



SP 000 161
INTAKE BRUSH, COMPLETE,
STANDARD



SP 000 173
BRUSH STRIP,
REPLACEMENT, STANDARD



SP 002 186
INTAKE BRUSH, COMPLETE,
ANTI-STATIC




SP 000 673
BRUSH STRIP, REPLACEMENT,
ANTI-STATIC



SP 000 672
SPRING, INTAKE BRUSH
TENSION



SP 003 040
LEVER, INTAKE BRUSH
SPRING

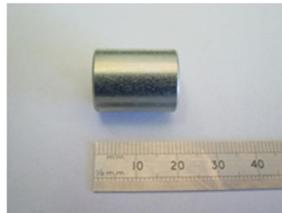

SP 003 023
SPACER, INTAKE BRUSH



SP 001 053
SPACER, PAPER END SWITCH



SP 007 666
MOUNT, INTAKE BRUSH
ASSEMBLY



SP 003 071
SCREW, INTAKE BRUSH
TENSION



SP 007 665
SPRING, INTAKE BRUSH
MOUNT



SP 000 892
GRUB SCREW, M8 X 8MM



SP 007 664
MOUNT, INTAKE BRUSH

UPPER LINEAR GUIDE ASSEMBLY & LOWER PAPER GUIDE



SP 006 929
UPPER LINEAR GUIDE
ASSEMBLY



SP 006 927
SLIDE, LINEAR



SP 006 928
KNOB, M5 X 15MM




SP 006 524
PAPER GUIDE, LOWER



SP 007 373
CENTRAL PAPER SUPPORT

INDEX WHEEL ASSEMBLY SPARE PARTS

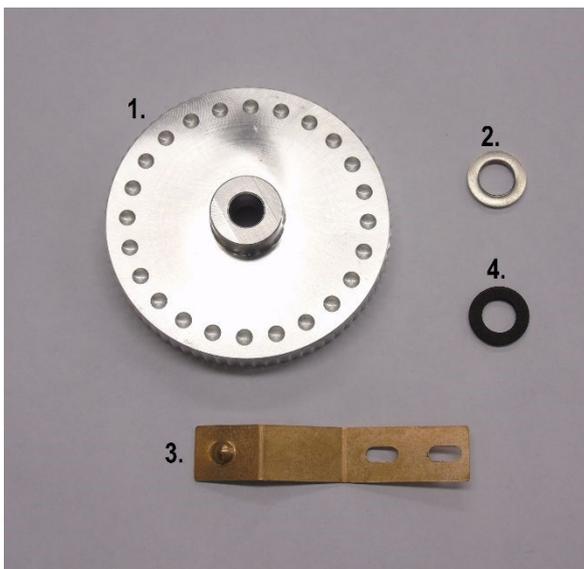

1. SP 006 942
HANDWHEEL, SIDE
ADJUST



2. SP 004 658
SHIM, M11 X 18 X 1MM



3. SP 003 436
SPRING, INDEXING



4. SP 007 263
SCROLL SHAFT THRUST
WASHER

FEED MOTOR MOUNT ASSEMBLY SPARE PARTS




SP 000 280
COVER, PAPER FEED MOTOR



SP 001 262
BUSH, TRANSTORQUE,
LOCKING

INFEED GUIDE ASSEMBLY SPARE PARTS

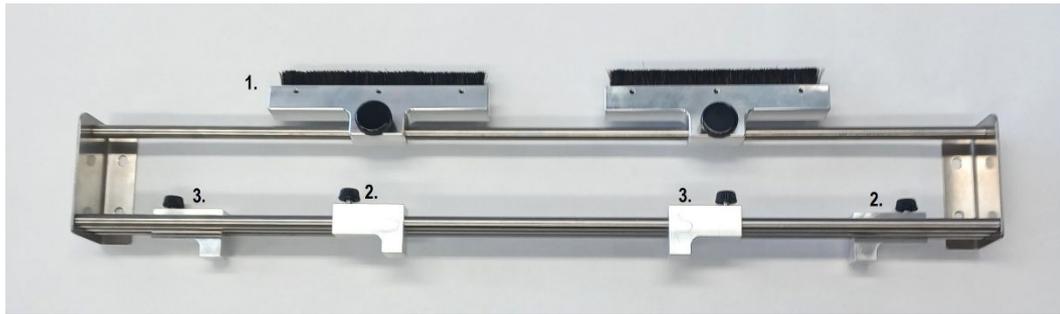

1. SP 006 526
INFEED GUIDE BRUSH
ASSEMBLY



SP 007 862
ANTI-STATIC INFEED
GUIDE BRUSH
ASSEMBLY




2. SP 007 344
GUIDE, INFEED PAPER
FORM B



3. SP 007 343
GUIDE, INFEED PAPER
FORM A



SP 007 420
TORQUE KNOB

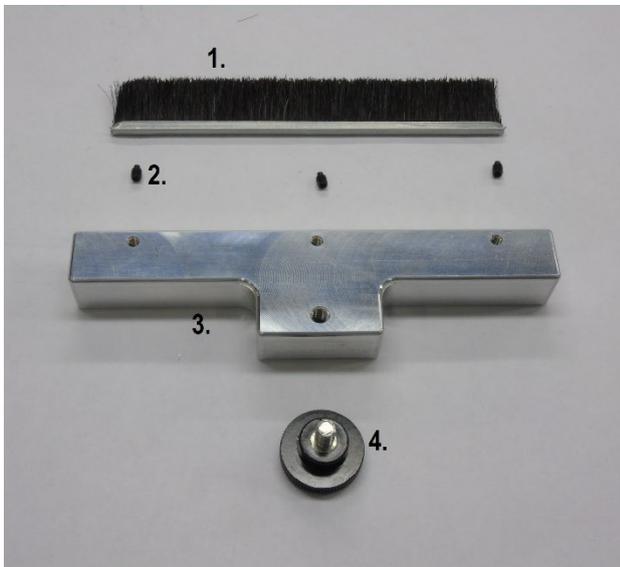

1. SP 006 492
BRUSH, INFEED GUIDE



SP 007 858
BRUSH, ANTI-STATIC, INFEED
GUIDE



2. SP 000 047
SCREW, M4 X 6MM,
DOG POINT GRUB





3. SP 006 490
MOUNT, INFEED GUIDE
BRUSH



4. SP 000 221
KNOB, KNURLED M6 X
10MM

PRESSURE HEAD SPARE PARTS

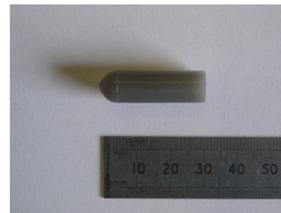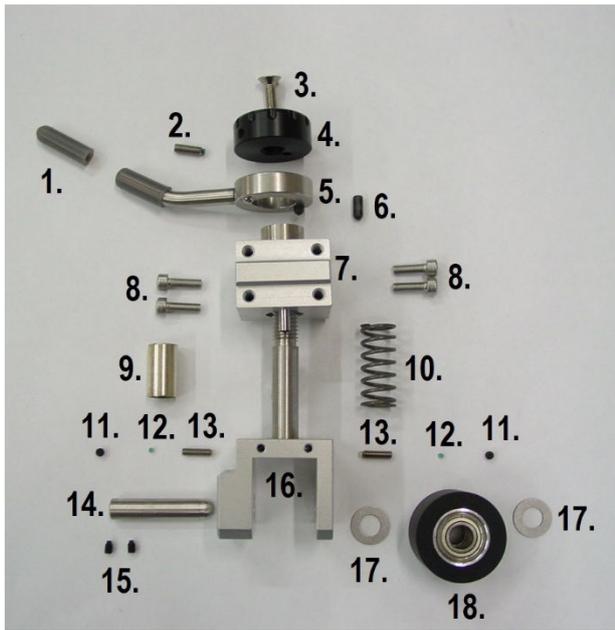

1. SP 006 890
CAP, PRESSURE
RELEASE ARM



2. SP 007 012
SCREW, NYLON
TIPPED GRUB, M5 X
13MM



3. SP 000 197
SCREW, M6 X 16MM,
COUNTERSUNK



4. SP 006 895
PRELOAD ADJUSTING
KNOB ASSEMBLY



5. SP 006 894
PRESSURE HEAD
RELEASE ARM
ASSEMBLY



6. SP 006 888
PIN, PRESSURE
RELEASE



7. SP 006 892
PRESSURE HEAD
UPPER ASSEMBLY



8. SP 001 009
SCREW, M4 X 16MM,
SOCKET HEAD



9. SP 005 879
BUSH



10. SP 006 897
SPRING, PRESSURE
HEAD



11. SP 000 047
SCREW, GRUB, M4 X
4MM



12. SP 006 886
PLUG, NYLON



13. SP 006 885
SCREW, M4 X 15MM,
NYLON TIP GRUB



14. SP 006 896
AXLE, PRESSURE
WHEEL




15. SP 000 378
SCREW, M4 X 8, DOG
POINT GRUB



16. SP 006 893
PRESSURE HEAD
LOWER ASSEMBLY

PRESSURE HEAD SPARE PARTS

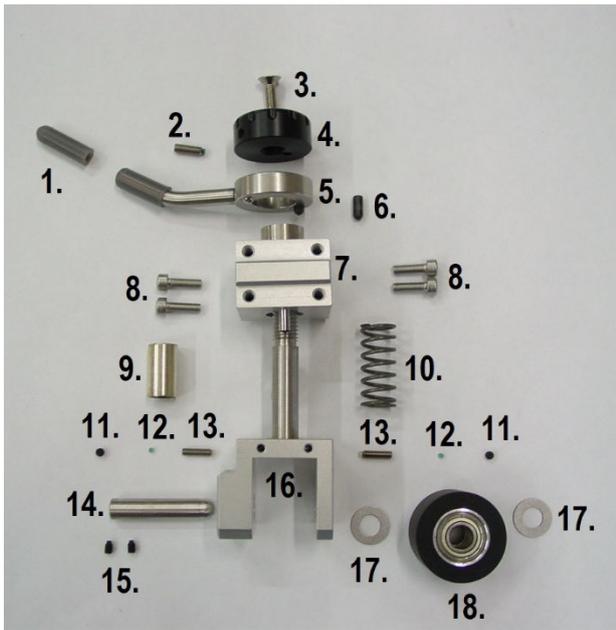


17. SP 004 703
WASHER, SPECIAL
M12



18. SP 006 831
PRESSURE ROLLER
COMPLETE

PRESSURE HEAD MOUNTING BAR SPARE PARTS

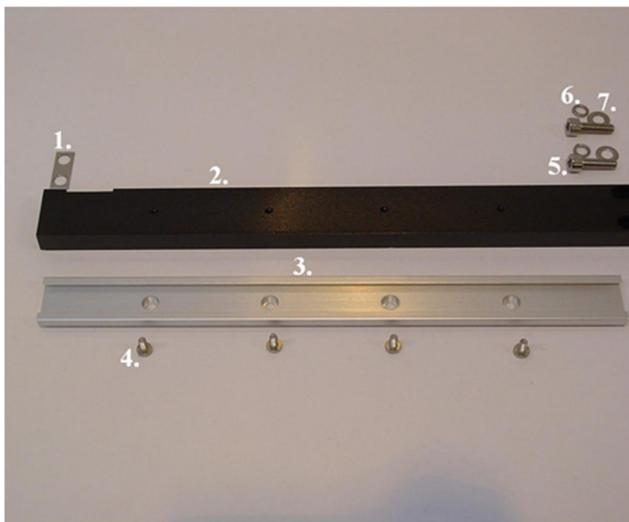

1. SP 006 948
SHIM, PRESSURE
HEAD MOUNT BAR,
1MM



2. SP 006 944
SHIM, PRESSURE HEAD
MOUNT BAR,
0.5MM



3. SP 006 943
BAR, PRESSURE
HEAD MOUNT



4. SP 006 945
RAIL, LINEAR



4. SP 001 040
SCREW, M4 X 8MM



5. SP 007 071
SCREW,
TAMPERPROOF TORX
M6 X 20MM




6. SP 004 440
WASHER, M6 SPRING



7. SP 000 650
WASHER, M6,
STANDARD

ANTI-LIFT BAR ASSEMBLY

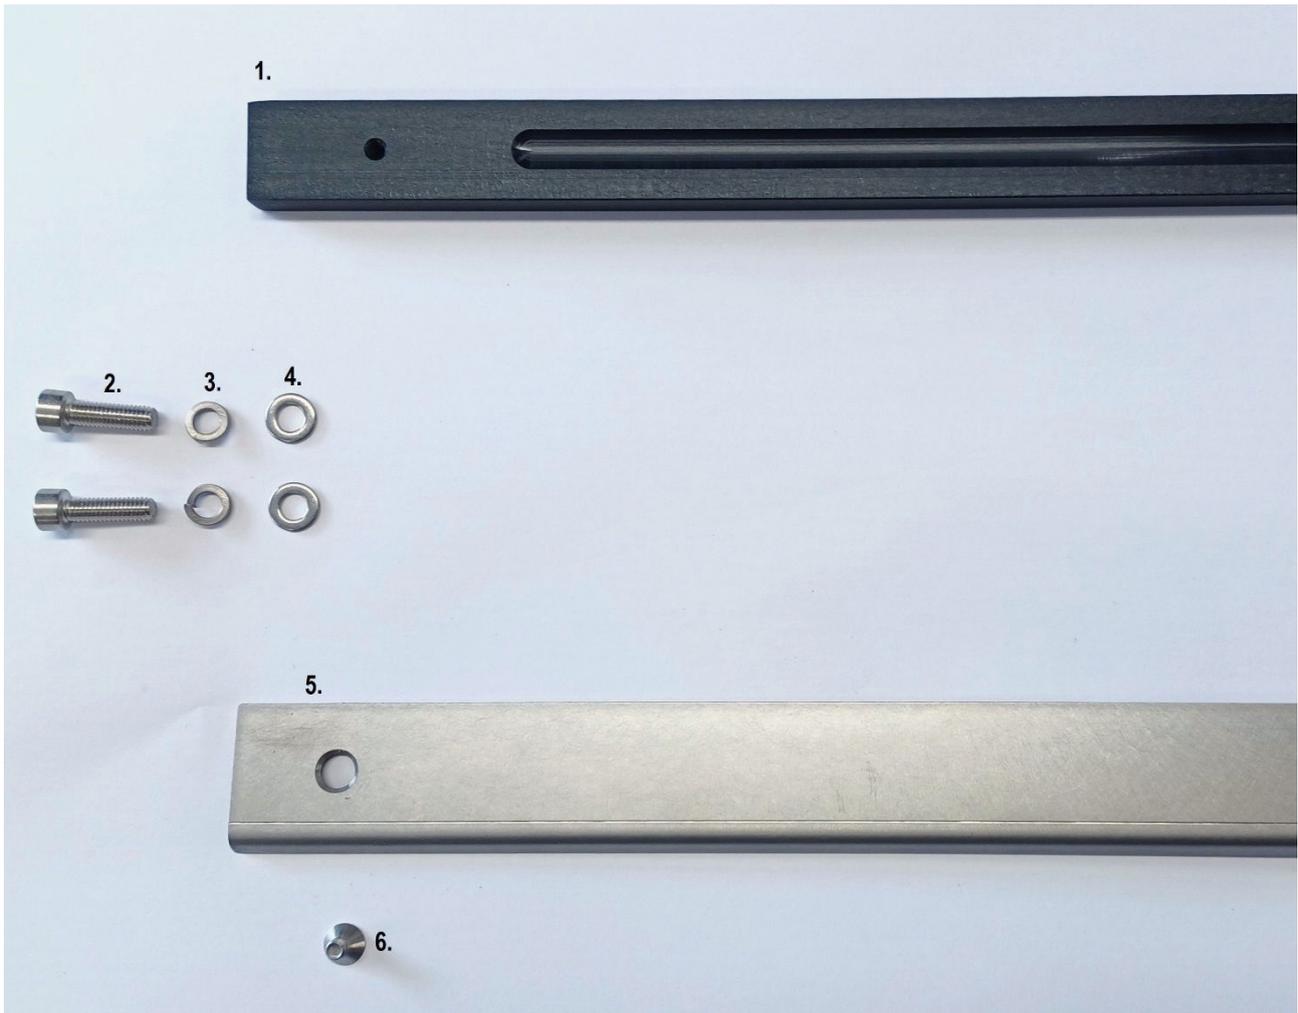

1. SP 006 899
BAR, ANTI-LIFT



2. SP 001 009
SCREW, M5 X 16MM,
SOCKET CAP



3. SP 005 080
WASHER, SPRING,
M5



4. SP 000 575
WASHER, M5 PLAIN




5. SP 006 900
PLATE, GUIDE, ANTI-
LIFT BAR



6. SP 006 901
SCREW, M4 X 6MM,
CSK SOCKET CAP


SENSOR MOUNT ASSEMBLY

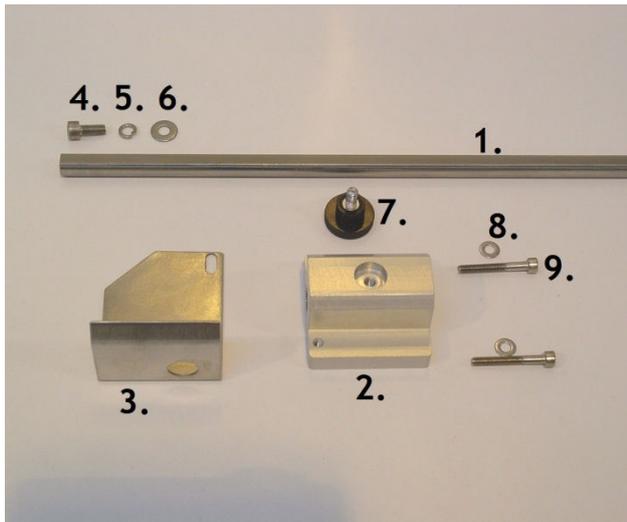

1. SP 006 778
BAR, MOUNTING
CROSS



2. SP 006 874
MOUNT, SENSOR

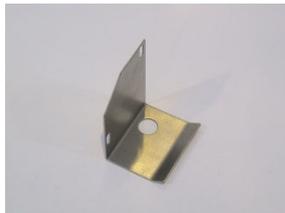

3. SP 006 951
SENSOR DEFLECTOR
PLATE, LH



4. SP 007 933
SENSOR DEFLECTOR
PLATE, RH



5. SP 000 454
SCREW, M5 X 12MM,
SOCKET HEAD



6. SP 005 080
WASHER, SPRING,
M5



7. SP 000 575
WASHER, M5, PLAIN



8. SP 000 318
KNOB, KNURLED M5 X
10MM




9. SP 000 622
WASHER, M4, PLAIN



10. SP 000 842
SCREW, M4 X 30MM
SOCKET HEAD

MARGIN TRIM BURSTER ASSEMBLY SPARE PARTS [OPTIONAL]

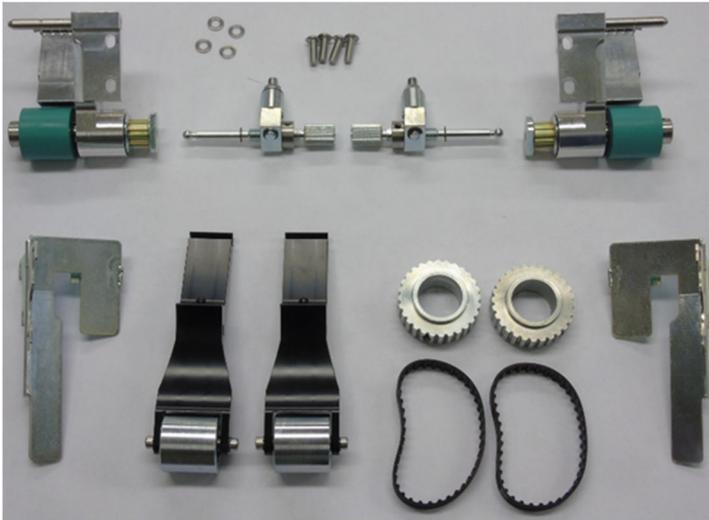

SP 006 670 MARGIN TRIM BURSTER ASSEMBLY



SP 000 242
ROLLER ASSEMBLY, MTB



SP 001 653
BEARING, NEEDLE



SP 000 021
BEARING, MTB



SP 001 889
BLADE, MTB



SP 004 874
ROLLER, PRESSURE



SP 003 386
PULLEY, MTB, 10T, 11MM



SP 002 033
KEY, MTB



1. SP 003 066
CARRIER & PRESSURE
ROLLER ASSEMBLY



SP 003 026
CARRIER, PRESSURE
ROLLER



2. SP 005 123
MTB BURSTER
SECTION COMPLETE,
RH



SP 005 124
MTB BURSTER
SECTION COMPLETE,
LH



3. SP 000 061
BELT, ROLLER DRIVE,
NARROW



SP 001 970
BELT, ROLLER DRIVE,
WIDE




4. SP 005 125
PRESSURE ACTUATOR,
LH



SP 005 129
PRESSURE ACTUATOR,
RH

MARGIN TRIM BURSTER ASSEMBLY SPARE PARTS [OPTIONAL]

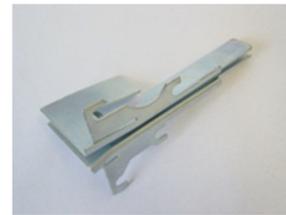

5. SP 006 668
GUIDE, MTB, LH



SP 006 669
GUIDE, MTB, RH



6. SP 003 030
PULLEY, 28T, DMSA



SP 004 472
WASHER, MTB,
THREADED




SP 004 469
WASHER, MTB



SP 000 412
SCREW, M4 X 8MM,
COUNTER SUNK
SLOTTED

GUTTER CUT KIT

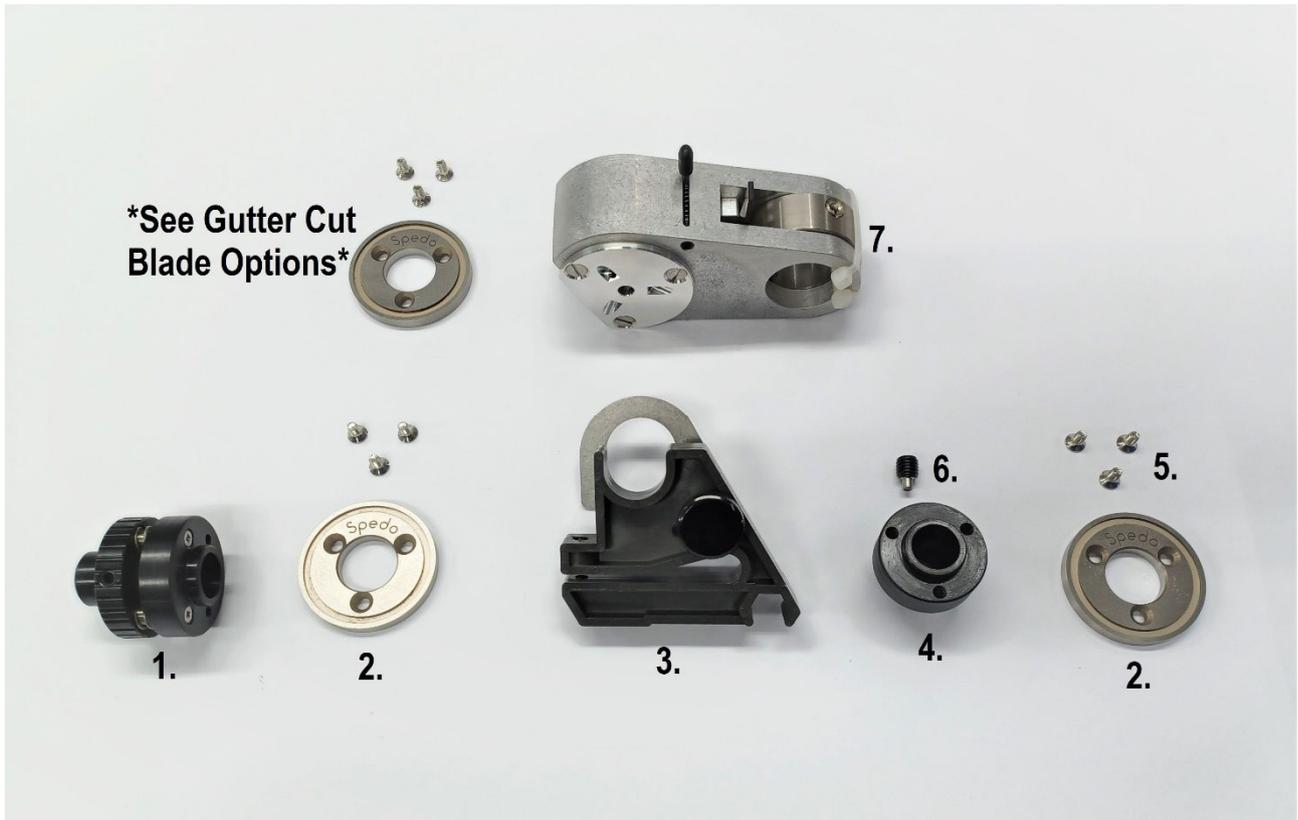

1. SP 006 982
GUTTER CUT HUB
ASSEMBLY



2. SP 005 490
BLADE, 90°, 5MM
GUTTER CUT



3. SP 006 986
GUIDE SUPPORT
ASSEMBLY



4. SP 001 913
HUB, LOWER CENTRE
CUTTER



5. SP 000 412
SCREW, COUNTERSUNK
SLOTTED, M4 X 8MM




6. SP 004 631
SCREW, SPECIAL
DOG POINT, M8 X
12MM



7. SP 006 987
GUTTER CUTTER
ARM ASSEMBLY

GUTTER CUT BLADE OPTIONS

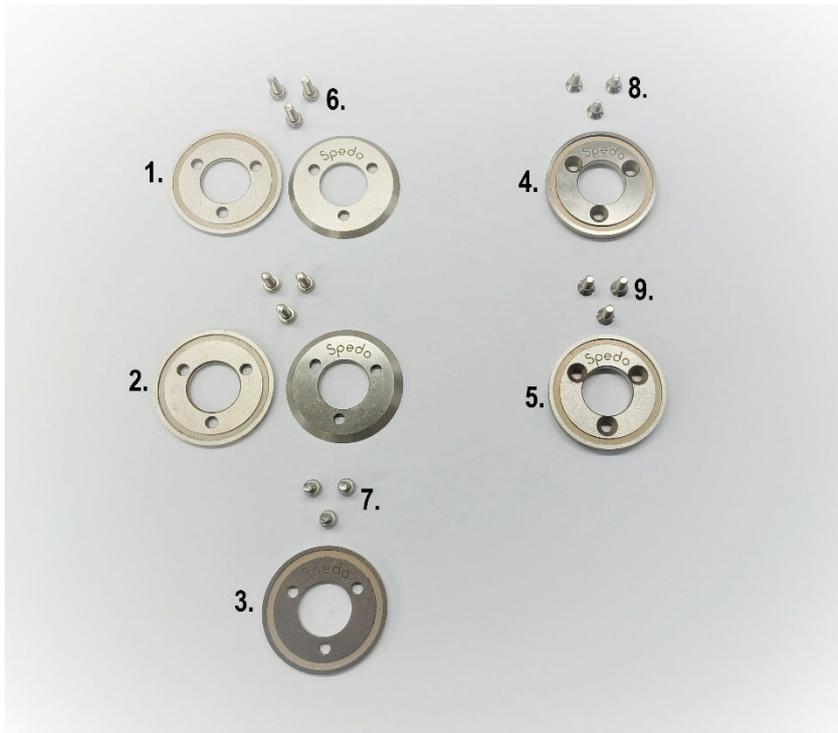

OPTIONS:-

5MM GUTTER 90° - SP 005 490 x 1

5MM GUTTER 45° - SP 008 143 x 2

1/4" GUTTER 90° - SP 005 467 x 1

1/4" GUTTER 45° - SP 007 859 x 2

1/8" GUTTER 90° - SP 005 468 x 1



1. SP 008 143
BLADE, CYLINDRICAL
2.5MM GUTTER CUT
45°



2. SP 007 859
BLADE, GUTTER CUT
1/8" 45°



3. SP 005 468
BLADE, GUTTER
CUT, 1/8" 90°



4. SP 005 490
BLADE, 90°, 5MM
GUTTER CUT



5. SP 005 467
BLADE, GUTTER, 90°,
1/4"



6. SP 004 817
SCREW, CHEESE
HEAD SLOTTED, M4
X 10MM



7. SP 001 040
SCREW, CHEESE
HEAD, M4 X 8MM




8. SP 000 412
SCREW, COUNTERSUNK
SLOTTED, M4 X 8MM



9. SP 001 972
SCREW, COUNTERSUNK
SLOTTED, M4 X 12MM

GUTTER CUT HUB ASSEMBLY

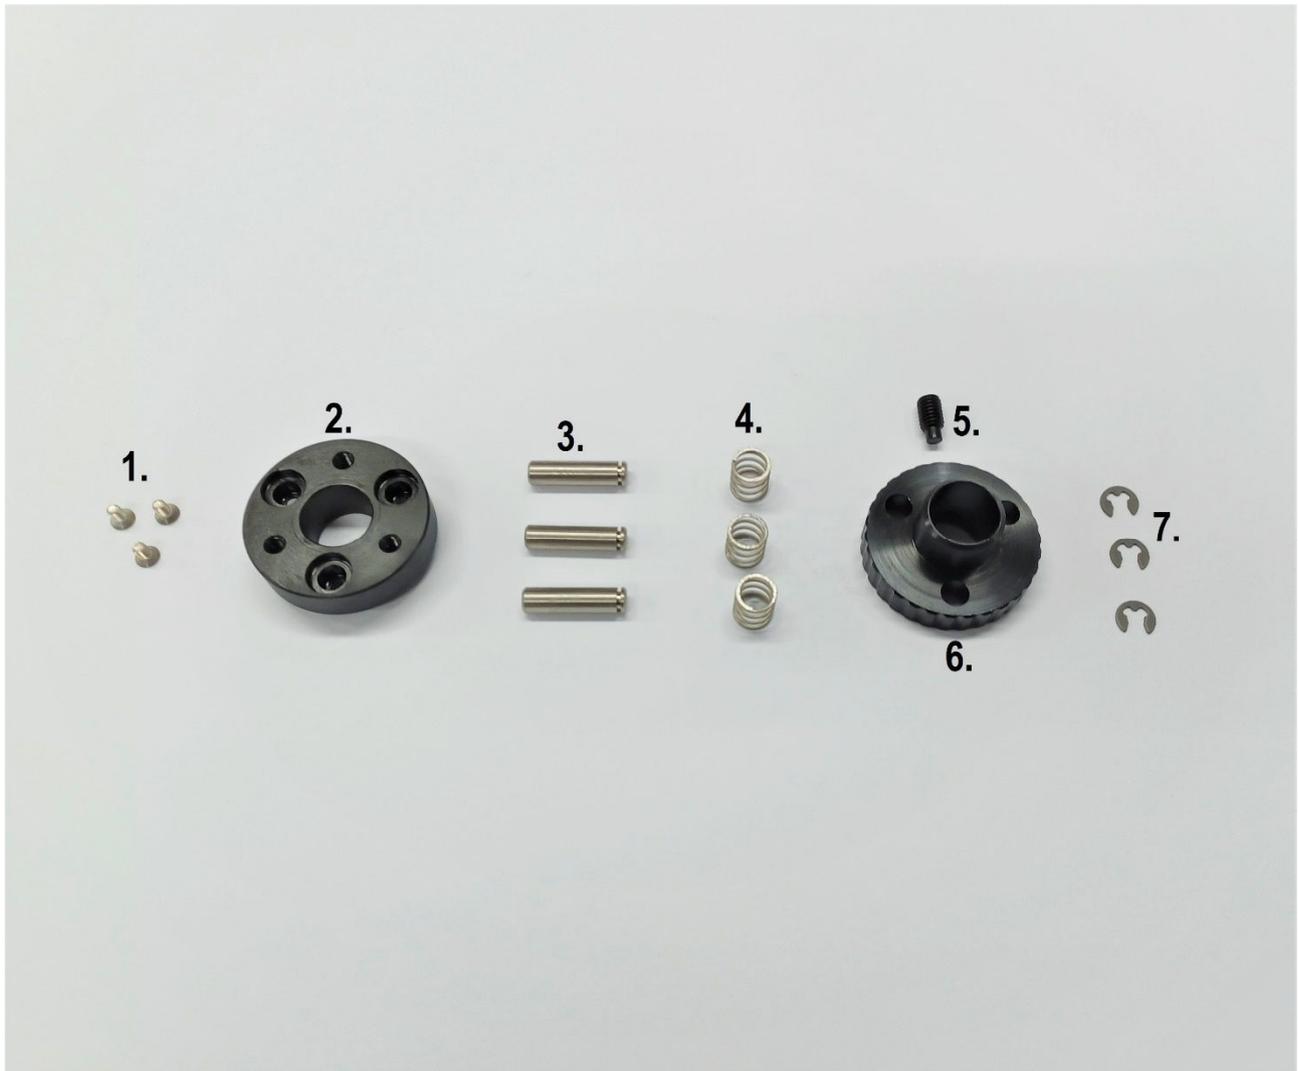

1. SP 004 502
SCREW, CSK, POZI-
DRIVE, M3 X 6MM



2. SP 006 979
HUB, PRESSURE



3. SP 006 981
DOWEL, GUTTER
CUT HUB, 6MM



4. SP 006 980
SPRING, PRESSURE



5. SP 001 316
SCREW, DOG POINT
GRUB, M6 X 12MM




6. SP 006 978
HUB, LOCATING



7. SP 001 924
CIRCLIP, E-TYPE,
4MM

GUIDE SUPPORT ASSEMBLY

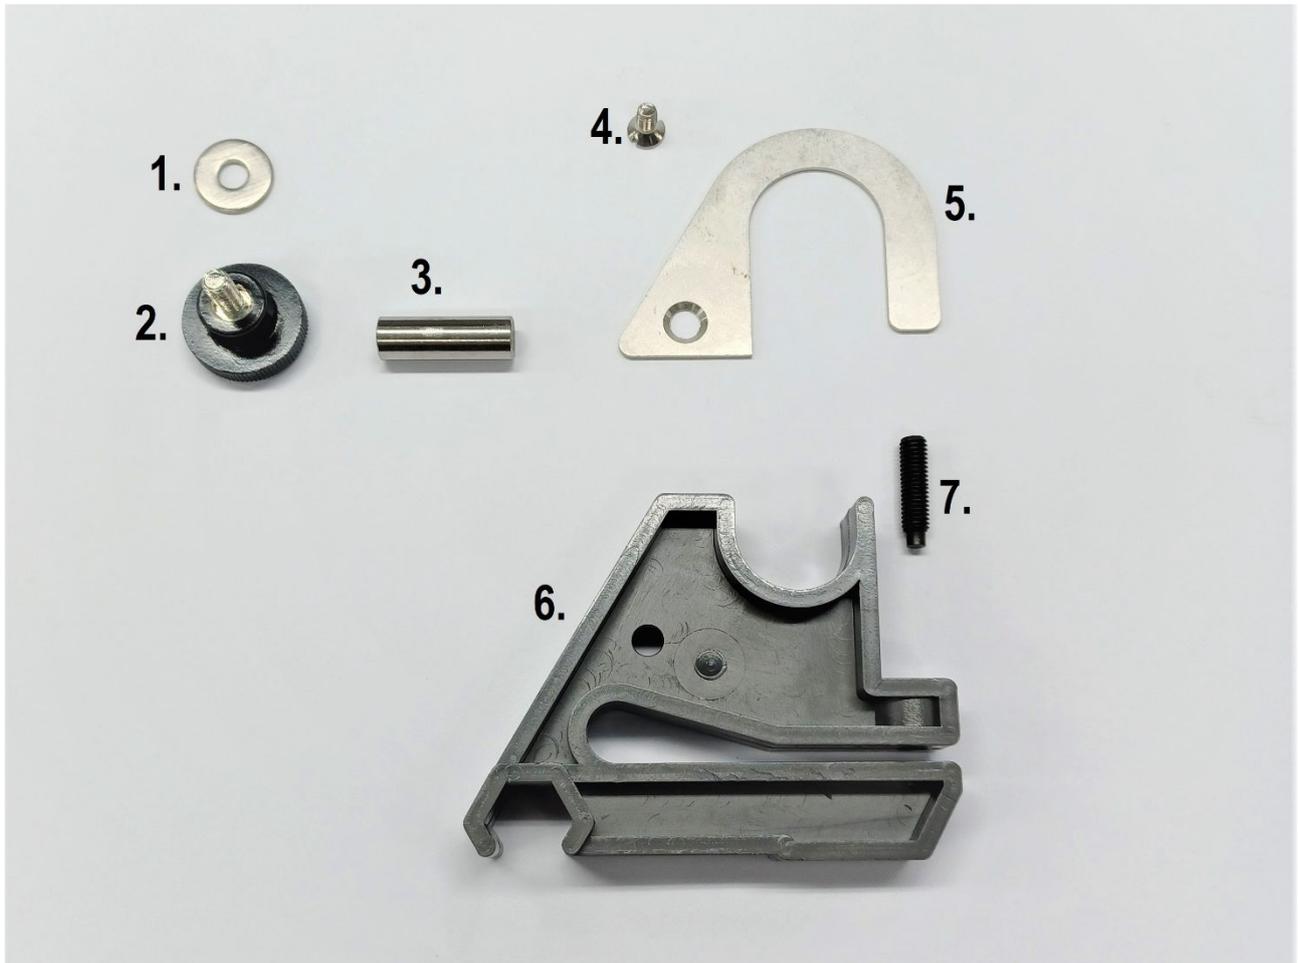

1. SP 005 081
WASHER, PLAIN, M5 X
15MM



2. SP 000 318
KNOB, KNURLED,
M5 X 10MM



3. SP 006 984
PILLAR, STRIP GUIDE



4. SP 000 412
SCREW, COUNTERSUNK
SLOTTED, M4 X 8MM



5. SP 006 985
GUIDE, STRIP




6. SP 006 983
SUPPORT, HUB



7. SP 000 386
SCREW, DOG POINT
GRUB, M5 X 20MM

BEARING PLATE COMPARTMENT SPARE PARTS

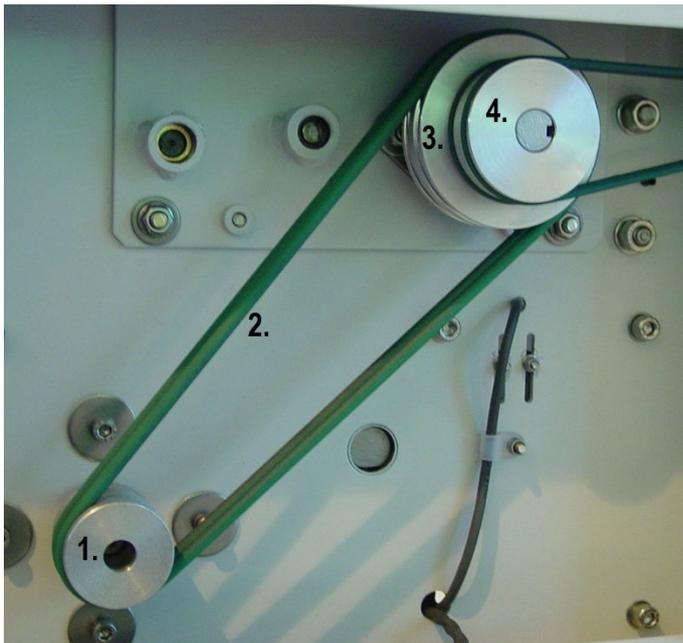

1. SP 004 499
PULLEY, E/T MOTOR
DRIVE




2. SP 004 474
BELT, E/T DRIVE



3. SP 004 498
PULLEY, E/T DRIVE
SHAFT



4. SP 004 672
PULLEY, ET SHAFT
KICKOUT ROLLER
DRIVE

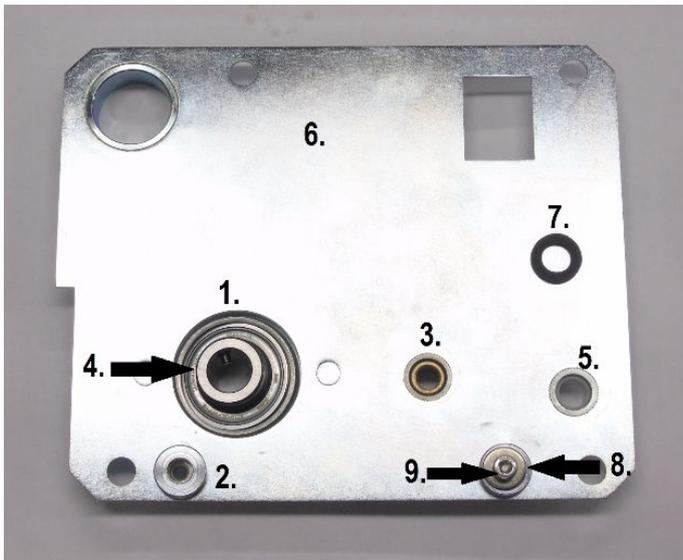


1. SP 002 133
BEARING, E/T SHAFT



2. SP 004 465
WASHER, BEARING
PLATE LOCATING



3. SP 007 456
BUSH, 8MM, SELF
ALIGNING OILITE

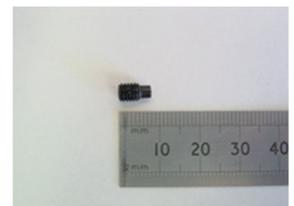

4. SP 000 869
SCREW, M5 X 8MM,
DOG POINT GRUB



5. SP 007 419
BUSH, 10MM, SELF
ALIGNING STANDARD



6. SP 007 583
SELF ALIGNING BEARING
PLATE ASSEMBLY,
PINLESS



7. SP 007 263
SCROLL SHAFT
THRUST WASHER




8. SP 005 081
WASHER, M5 X 15MM



9. SP 000 454
SCREW, SOCKET CAP,
M5 X 12MM

PAPER OUTPUT

SP 004 708 - GANTRY ASSEMBLY

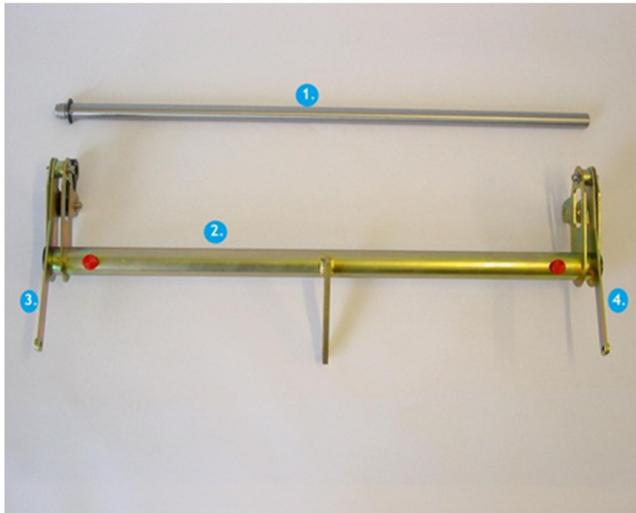

1. SP 004 651
SHAFT, GANTRY



2. SP 004 707
GANTRY TUBE
ASSEMBLY W/O ARMS



3. SP 004 700
GANTRY ARM, LH



4. SP 004 701
GANTRY ARM, RH

GANTRY SHAFT SPARE PARTS



SP 004 652
SCREW, SPECIAL M10,
GANTRY SHAFT



SP 004 653
RING, SPECIAL M10, GANTRY
SHAFT



SP 004 811
CIRCLIP, 15MM, E-TYPE

GANTRY TUBE SPARE PARTS & GANTRY ARM SPARE PARTS



SP 004 688
CAP, GANTRY END



SP 004 606
BUSH, OILITE, GANTRY TUBE



SP 005 311
GANTRY DRAIN PLUG C/W
SEAL




SP 004 607
GANTRY OIL SEAL



SP 005 426
GANTRY OIL, 100ML BOTTLE



SP 004 578
GANTRY CONROD ASSEMBLY

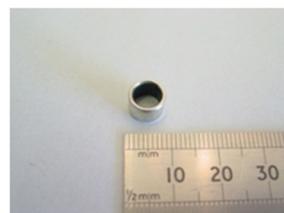

SP 000 175
GANTRY ARM BUSH, UPPER



SP 004 513
GANTRY ARM BUSH, LOWER

BLADE ASSEMBLY




SP 007 796
BLADE GUIDE ASSEMBLY,
MK2




SP 007 793
LOWER BLADE MOUNT ASSEMBLY,
MK2



SP 000 234
GUARD, LOWER CROSS CUT
BLADE

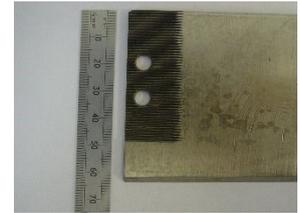

SP 000 803
45° NARROW TOP CROSS
CUT BLADE

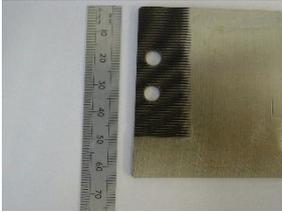

SP 002 016
80° NARROW TOP CROSS
CUT BLADE



SP 000 066
LOWER CROSS CUT BLADE




SP 001 055
BLADE MOUNTING BLOCK,
LH




SP 001 056
BLADE MOUNTING BLOCK,
RH



SP 001 117
CIRCLIP, 5MM, E-TYPE

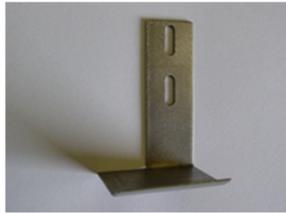

SP 007 091
PRE-CUT FORM DEFLECTOR PLATE

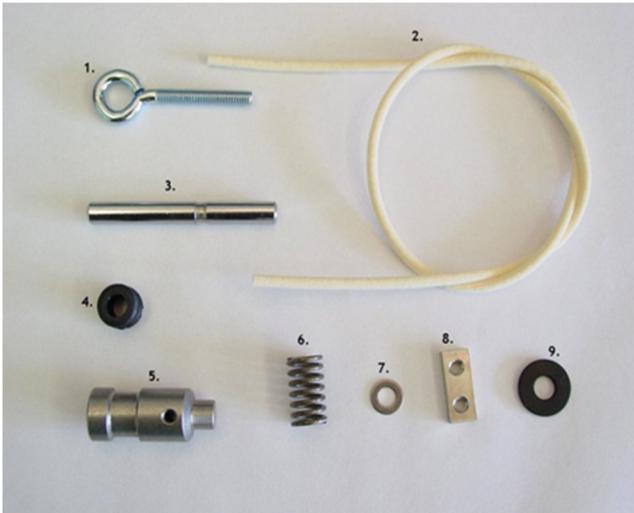

1. SP 002 034
SCREW, EYE, BLADE
TENSION



2. SP 000 181
UPPER CROSS CUT
BLADE FELT



3. SP 000 058
BAR, BLADE TENSION
SCREW



4. SP 000 919
GROMMET, BLADE
TENSION SCREW



5. SP 001 351
BOLT, BLADE GUIDE
ECCENTRIC



6. SP 001 817
SPRING, BLADE
TENSION




7. SP 004 664
WASHER, BLADE
TENSION



8. SP 005 242
PLATE, BLADE CLAMP

BLADE ASSEMBLY

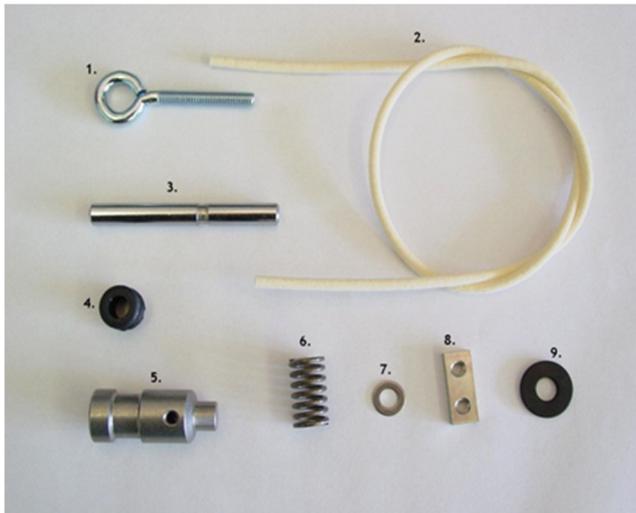


9. SP 004 602
SPACER, TOP CROSS
CUT



SP 000 613
NUT, NYLOC, M6


BLADE GUIDE SPARE PARTS

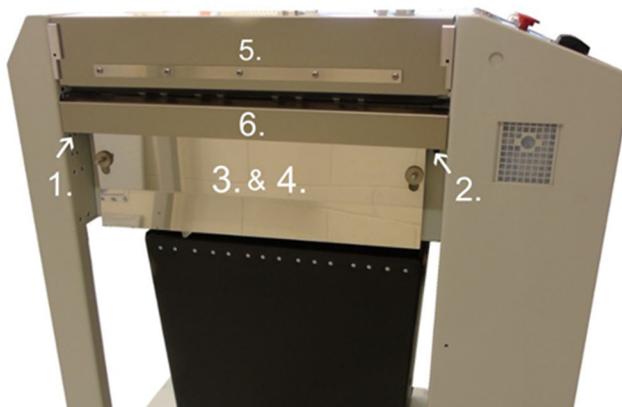

1. SP 004 678
GUARD, GANTRY
ARM, RH



2. SP 004 679
GUARD, GANTRY ARM,
LH

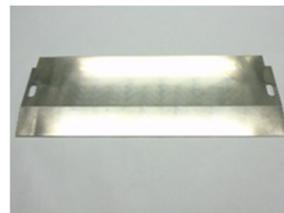

3. SP 007 532
PLATE, STRIP CUT



4. SP 007 792
STRIP CUT PLATE
ASSEMBLY



5. SP 007 840
UPPER BLADE GUARD
COMPLETE, MK2



6. SP 007 531
OUTFEED LOWER
DEFLECTOR PLATE



SP 007 573
THUMBWHEEL, STRIP CUT PLATE



SP 007 572
LOCKING COLLAR, STRIP
CUT PLATE




SP 007 791
WASHER, M16 X 22 X
1.5MM



SP 005 019
CIRCLIP, 16MM, EXTERNAL

ROLLER BLADE STOP SPARE PARTS

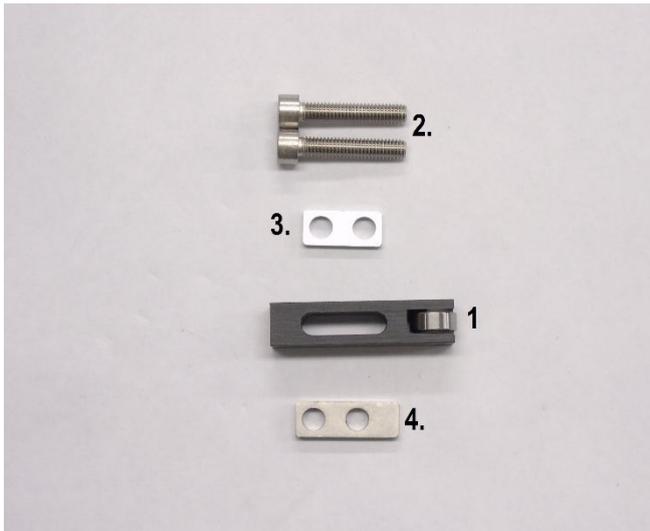

1. SP 005 369
ROLLER BLADE STOP
ASSEMBLY



2. SP 000 885
SCREW, M6 X 30,
SOCKET CAP



3. SP 000 481
PLATE, BLADE STOP,
6MM



4. SP 006 940
PLATE, 4MM SPACER

STACK TRAY ASSEMBLY




SP 000 416
STACK TRAY ASSEMBLY



SP 000 103
STACK TRAY MAGNETIC
GUIDE

KICKOUT ROLLER ASSEMBLY

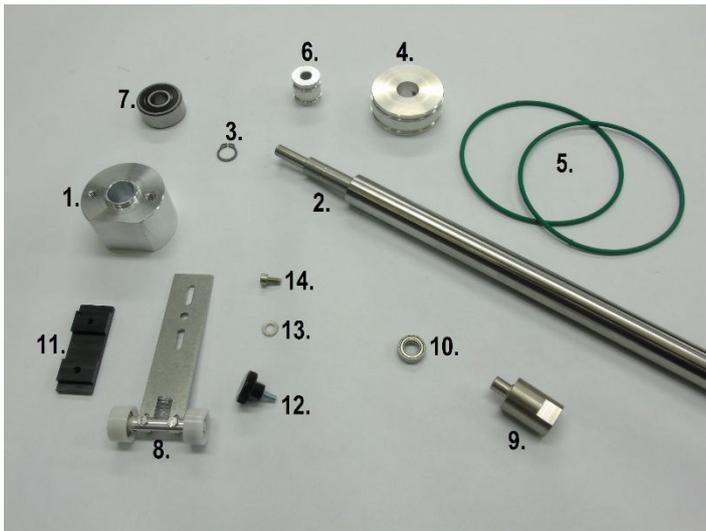

1. SP 004 666
HOUSING, KICKOUT
ROLLER BEARING



2. SP 004 773
SHAFT, KICKOUT
ROLLER



3. SP 001 422
CIRCLIP, 12MM,
EXTERNAL



4. SP 004 672
PULLEY, E/T SHAFT
KICKOUT ROLLER
DRIVE



5. SP 001 957
BELT, KICKOUT ROLLER
DRIVE



6. SP 004 670
PULLEY, DRIVEN,
KICKOUT ROLLER
DRIVE



7. SP 004 716
BEARING, KICKOUT
ROLLER



8. SP 004 714
PRESSURE WHEEL
ASSEMBLY COMPLETE



9. SP 004 667
AXLE, KICKOUT ROLLER
SPACER



10. SP 004 583
BEARING, KICKOUT
ROLLER SHAFT



11. SP 007 678
KICKOUT ROLLER
PRESSURE HEAD
SLIDER



12. SP 007 831
TORQUE KNOB, M4 X
8MM



13. SP 007 033
WASHER, M4, FORM C



14. SP 000 782
SCREW, M4 X 8MM,
SOCKET CAP



SP 004 696
KICKOUT ROLLER
ASSEMBLY



SP 007 523
KICKOUT PRESSURE HEAD
MOUNT PLATE

PRESSURE WHEEL ASSEMBLY SPARE PARTS



SP 004 711
PLATE, PRESSURE WHEEL



SP 004 722
SPRING, PRESSURE WHEEL



SP 005 058
PRESSURE WHEEL SUB
ASSEMBLY

AIR BLAST PUMP ASSEMBLY



SP 004 656
AIR BLAST PUMP ASSEMBLY



SP 001 057
BELLOWS, AIR PUMP



SP 004 691
PUMP HOUSING COMPLETE



SP 004 683
LID, AIR PUMP



SP 000 110
BUSH, PUMP BELLOWS



SP 002 230
VALVE, AIR PUMP



SP 007 799
HOSE, AIR PUMP